Pioneer

NAVIGATION AV SYSTEM

AVIC-F920BT

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

Basic Hardware buttons

① ⏏ button

Press to display the touch panel keys for ejecting the media.

② VOL (+/–) button

Press to adjust the AV (Audio and Video) source volume.

③ HOME button

Press to display the "Top Menu" screen.

④ MODE button

Press to switch between the map screen and the AV operation screen.

⑤ TRK (◄◄/►►) button

⑥ button

Press briefly to hear the current route guidance.
Press and hold to mute the AV source.

Published by Pioneer Corporation.
Copyright © 2010 by Pioneer Corporation.
All rights reserved.
<KYTNX> <10A00000>

Printed in Thailand
<CRB3211-A/N> EU

Display the menu screen

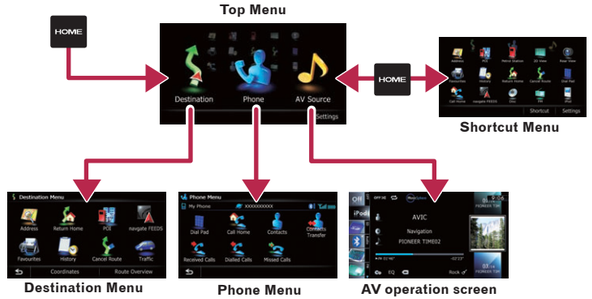

Basic items on the map

Dragging the map allows scrolling.

① Name of the street to be used (or next guidance point)
② Current time
③ Estimated time of arrival
④ Current route
⑤ Current position
⑥ Street name that your vehicle is travelling along
⑦ Eco-Meter
⑧ Zoom in/Zoom out
⑨ Next direction of travel

Destination Menu

Touch Destination on the "Top Menu" screen.

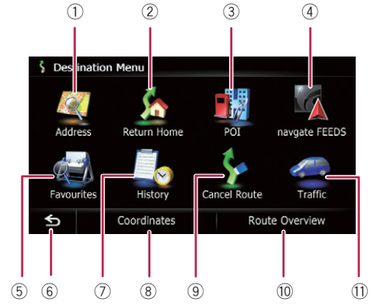

① Searches for location by address
② Calculates the route home
③ Searches for a place from stores, restaurants, and other businesses in the points of interest database
④ Searches for POIs by using the data on external storage devices (microSD card)
⑤ Selects your stored location
⑥ Returns to the previous screen
⑦ Selects a previously routed destination
⑧ Searches for a location by coordinates
⑨ Cancels your current route
⑩ Displays the current route information
⑪ Displays traffic information

Searching for your destination by address

1 Display the "Destination Menu" screen and touch Address.

2 Input the information that you want to set as the destination.

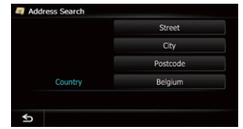

Touching the one of options. After narrowing down your destination, the Location confirmation screen will appear.

3 Touch OK.

After searching for the destination, the Route confirmation screen appears.

4 Touch OK.

This navigation system gives you route guidance visually and by voice.

Setting the volume of the route guidance

1 **Touch the keys in the following order in the "Top Menu" screen. Settings ➡ System Settings ➡ Volume**

2 **Touch + or - to change the volume of the route guidance.**

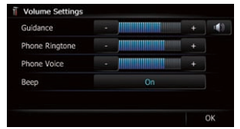

Inserting and ejecting a microSD card

For details about playable files, refer to Operation Manual.

Inserting a microSD card

1 **Insert your microSD card until it clicks.**



Ejecting a microSD card

1 **Press the ⏏ button.**

2 **Touch Eject SD on the screen.**

3 **Press the middle of the microSD card gently until it clicks.**

4 **Pull the microSD card out straight.**



Using the radio (FM)

Scroll the screen by dragging an AV source icon up or down, and tap FM on the AV operation screen.

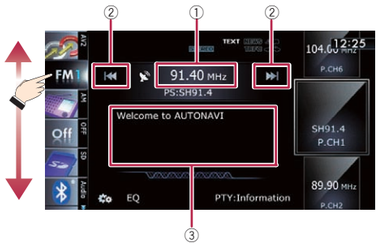

① Displays the current preset frequency list
② Scans until a broadcast strong enough for good reception is found
③ Displays the detailed radio text currently received

Playing your Apple iPod

You can control an iPod by connecting the USB interface cable for iPod (CD-IU50V) (sold separately) to the navigation system.

1 **Connect your iPod.**



The source changes and then playback will start.

2 **Tap or drag the key that you want to operate.**

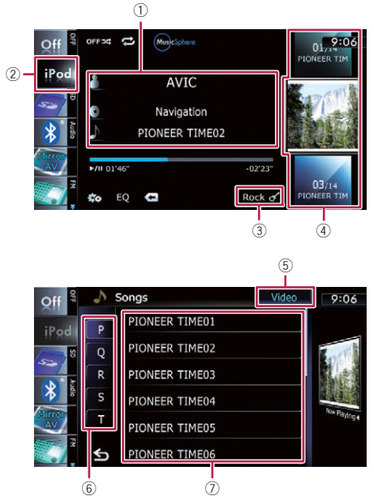

① Displays the artist name list, album title list or song title list
② Displays the category list
③ Displays the genre list
④ Selects the song to play by scrolling and dragging the key up or down. To play the song, tap it
⑤ Switches the list screen between music and video
⑥ Selects a song by scrolling and dragging the character tab up or down. Tap the tab of the character for the song title that you want to display
⑦ Starts playback by tapping an item to select

Pairing your phone

1 **Activate the Bluetooth function on your phone.**

2 **Touch the keys in the following order in the "Top Menu" screen. Settings ➡ Bluetooth Settings**

3 **Touch Bluetooth On/Off to select On.**

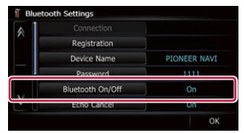

4 **Touch Registration on the "Bluetooth Settings" screen.**

The system tries to find and lists nearby devices.

5 **Touch your phone on the list.**

6 **Enter the PIN code from your phone. (The default code is 1111.)**

When the pairing is successful, the message will appear.

Transferring the phone book

1 **Connect the mobile phone.**

2 **Touch Contacts Transfer on the "Phone Menu" screen.**

3 **Check that the following screen is displayed, and operate your mobile phone to transfer the phone book entries.**

After transferring the data is finished, a message asking whether you want to transfer more data appears.

4 **Touch No.**

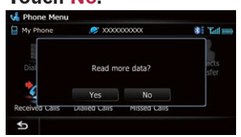

The transferred data is imported to the navigation system.